
NOVA LUCE


9009210

①

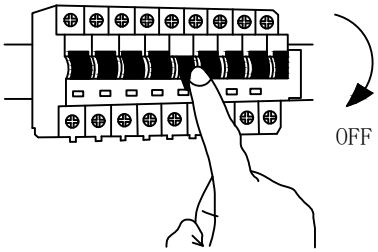


Turn off the general Switch

②

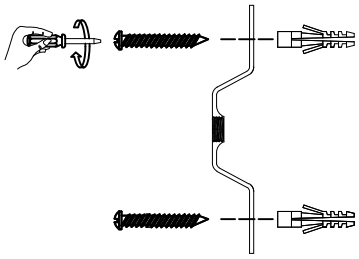


Drill holes & apply plastic anchors
With screws

③

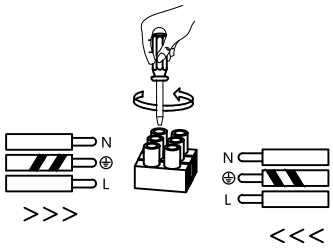


Connect the wires

④

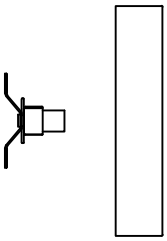


Apply the side screws

⑤

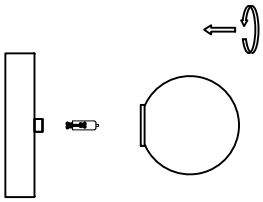


By rotating
Apply the glass into place

⑥

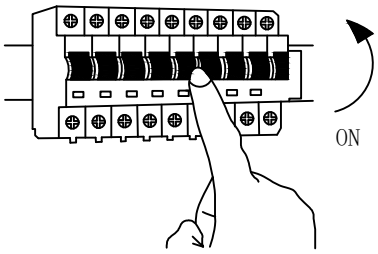

Turn on the general switch

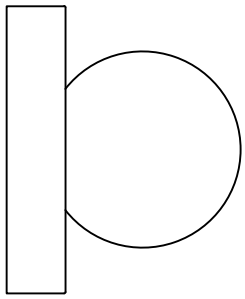

www.novaluce.com