








Realice el montaje de este artículo sobre un soporte blando (alfombra, goma, etc.)

El montaje y la manipulación de este artículo debe hacerse entre dos personas.

Debe realizarse por personal adecuado (cuidadoso, paciente, etc.)

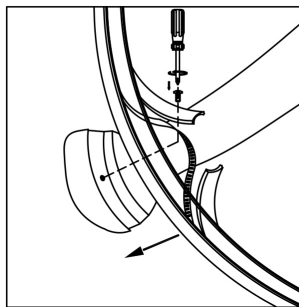

Retirar la tira de silicona, introducir tornillo através del orificio de la resina y atornillar a la mano de la figura.

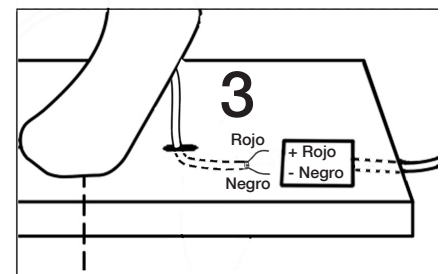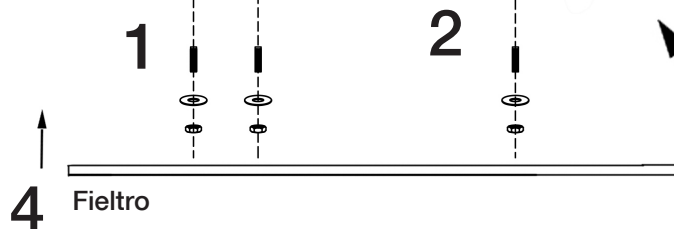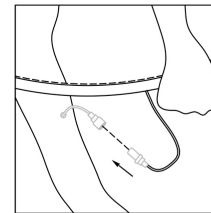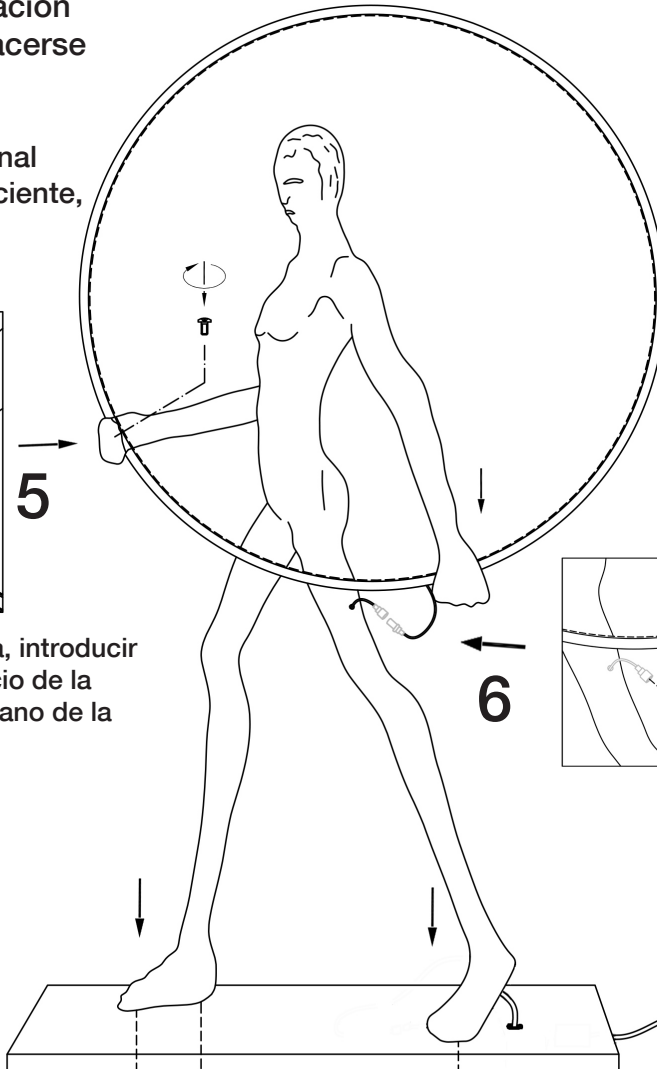

Para ver la ficha técnica de producto completa, puede usar el siguiente código QR:




Para cualquier duda técnica póngase en contacto con nuestro Departamento Técnico. Estamos a su servicio en nuestro email [mperez@schuller.es](mailto:mperez@schuller.es) o en nuestro teléfono 961 601 051



Please, do the assembling of this item on a soft support. (rug, carpet, rubber, etc.)



The assembly of this lamp must be done by two people.

Must be done by suitable staff (careful, patient, etc.)

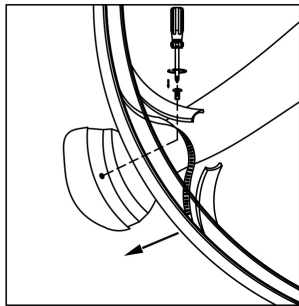


**5**

Remove the silicone strip, insert the screw through the hole in the resin and screw it into the hand of the figure.

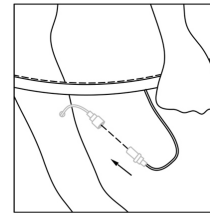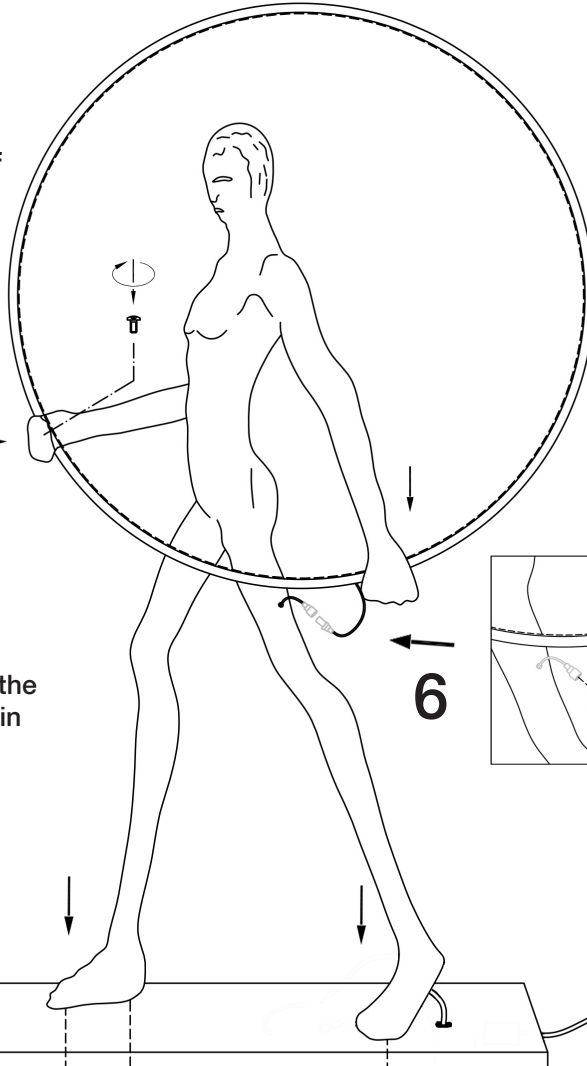


**6**

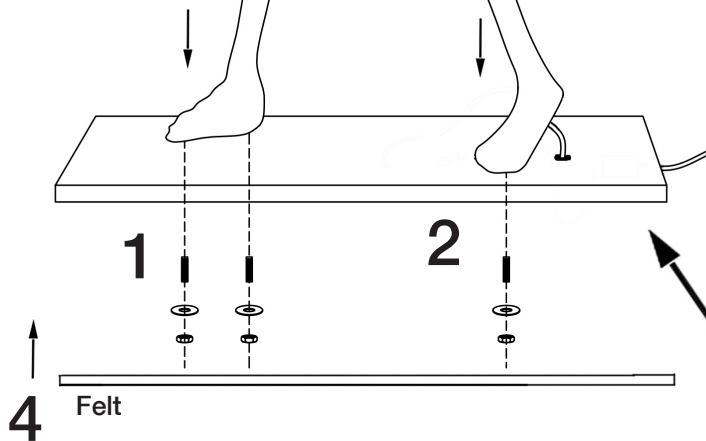

**4**

Felt

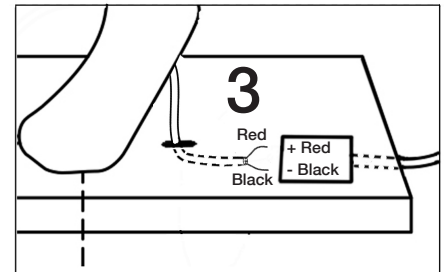

**3**

Red + Red  
Black - Black

You may use the following QR code to view the complete technical data sheet of the product:

